Wiring Diagram & Terminal Configuration For
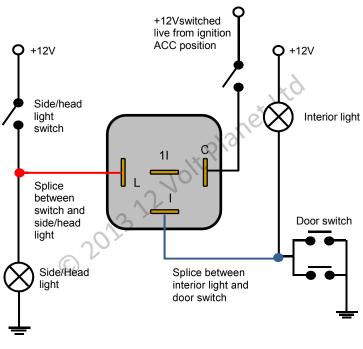# 12V 'Lights ON' Warning Relay/Buzzer – 72db

+12Vswitched live from ignition ACC position

+12V

+12V

Side/head light switch

Interior light

1I

C

L

I

Splice between switch and side/head light

Door switch

Side/Head light

Splice between interior light and door switch

Note: Terminal 1I is not used