




12v Installation – Caravan with 13 core cable

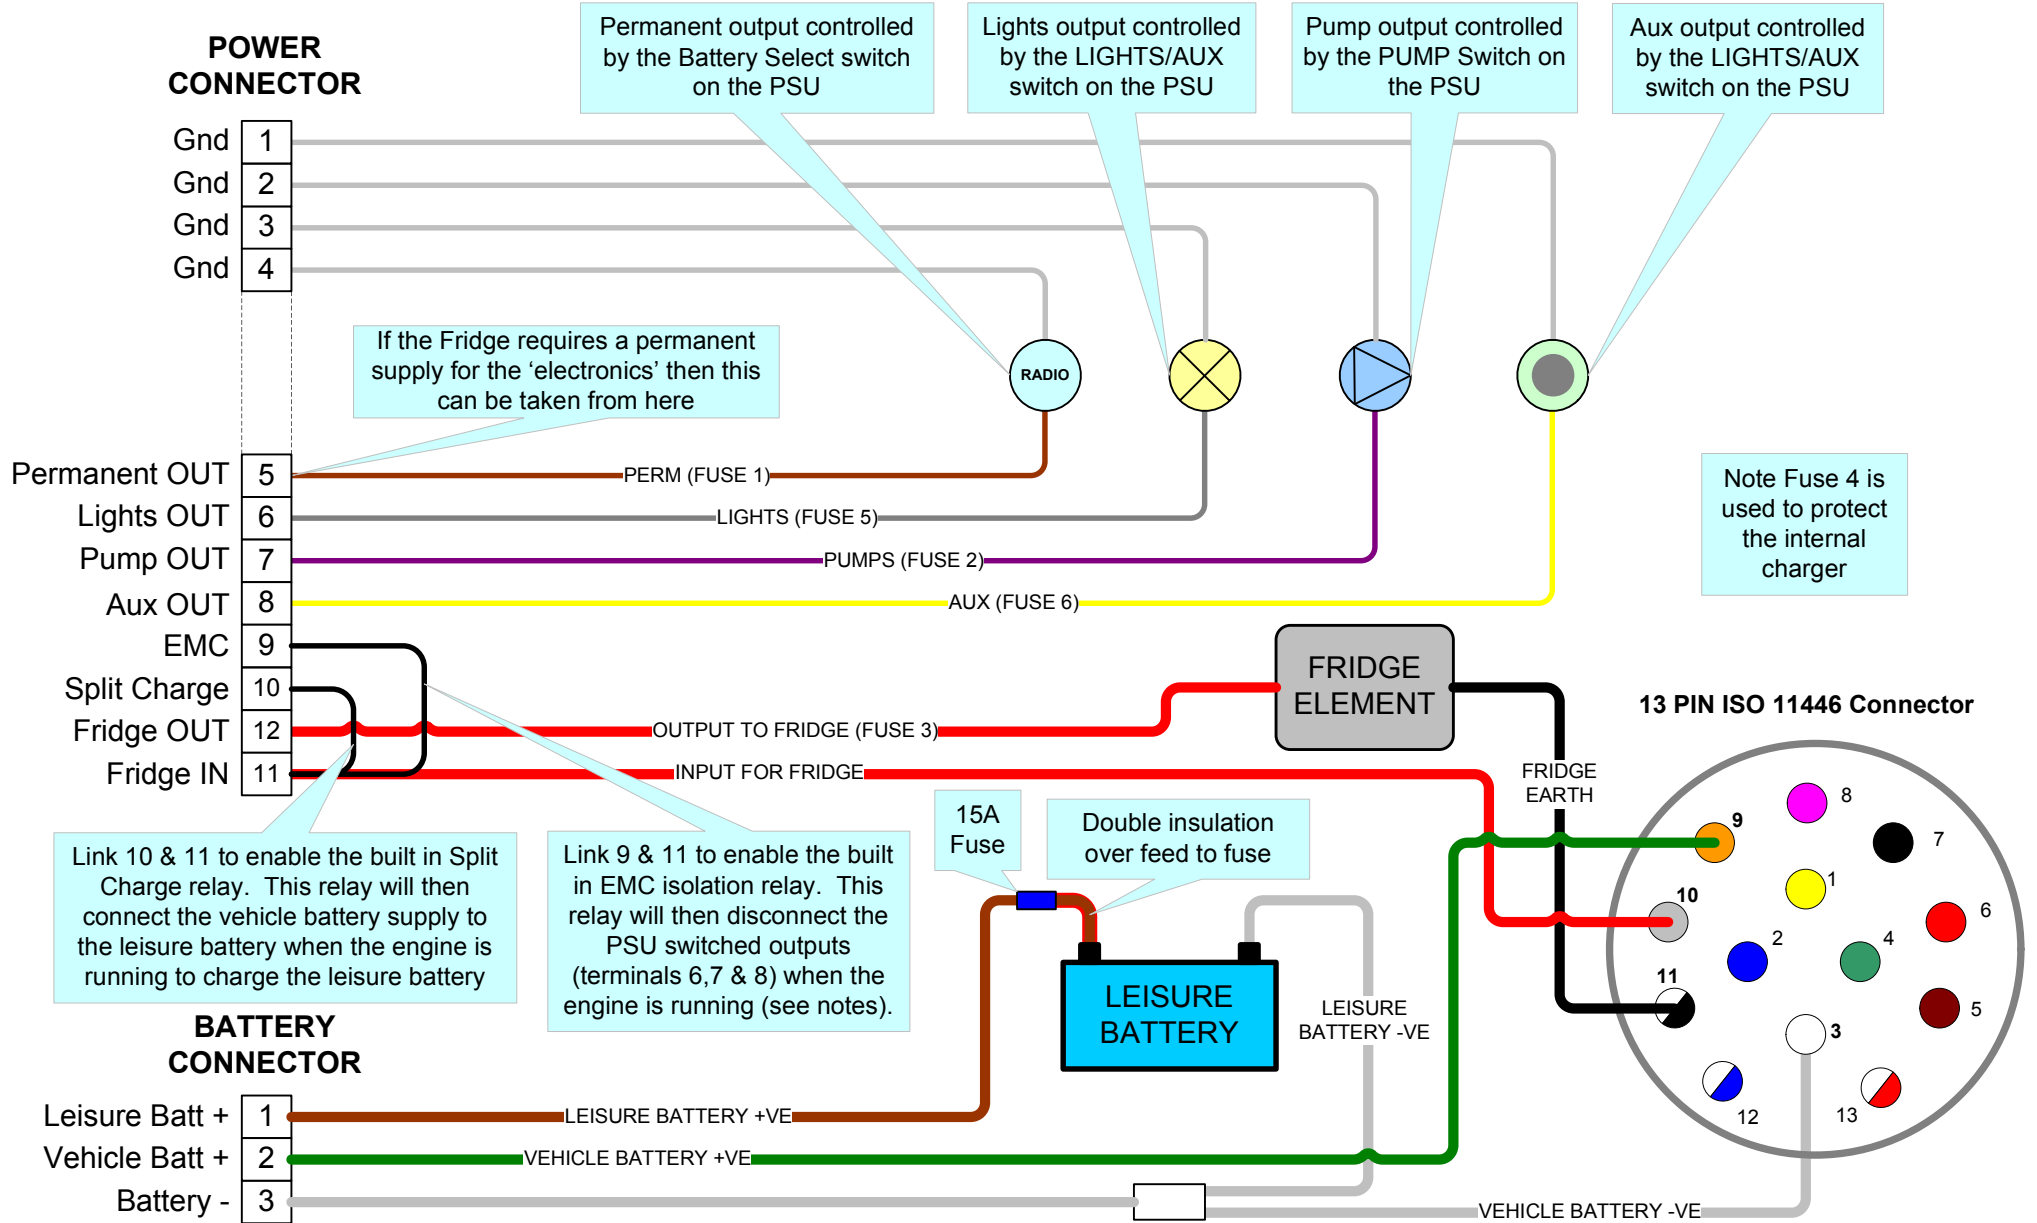


12v Installation – Caravan with 12S 7 core cable

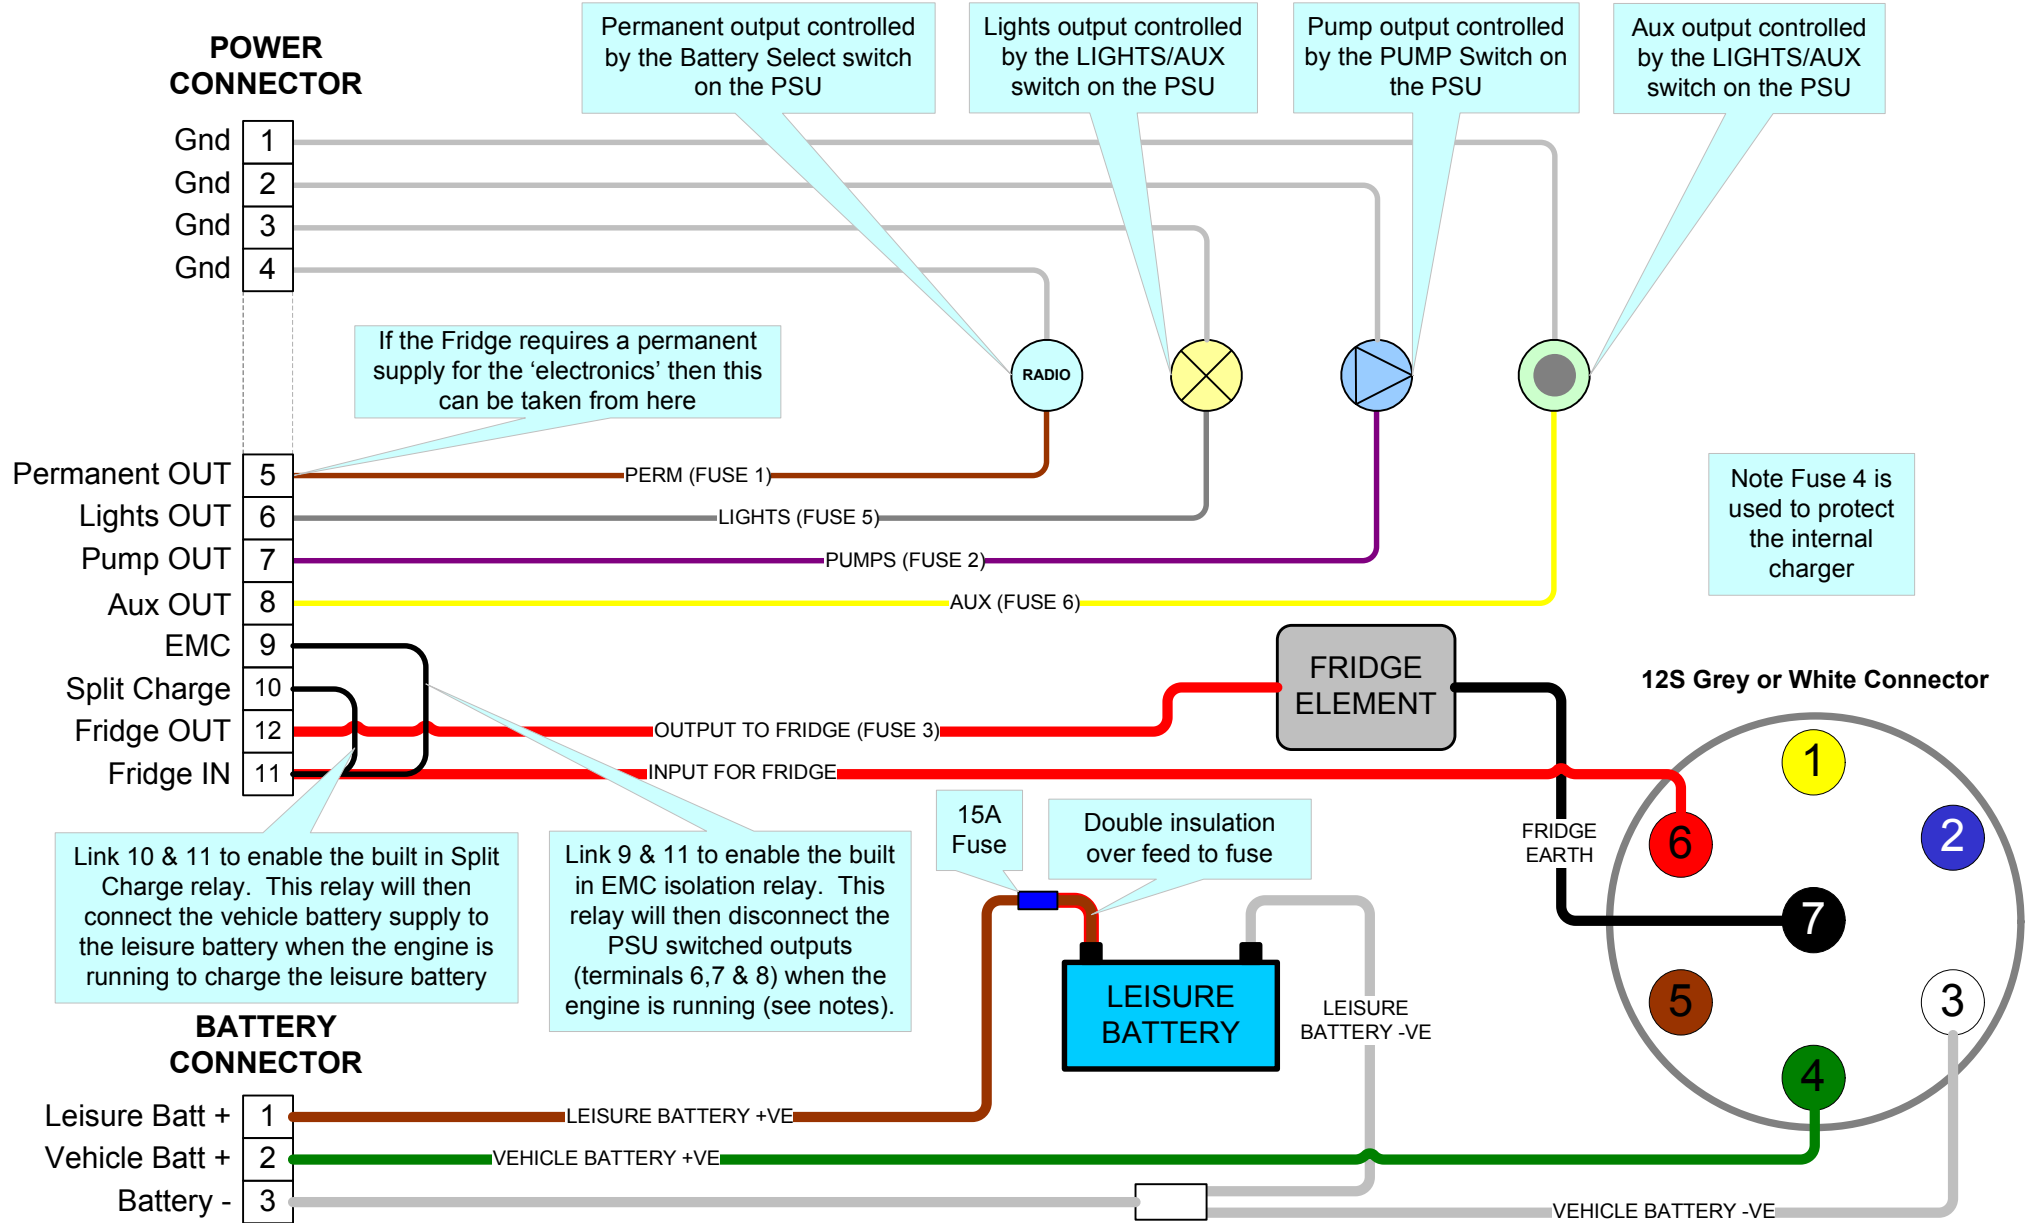

12v Installation – Motorhome Installation with Evaporation Fridge Relay with Alternator connection

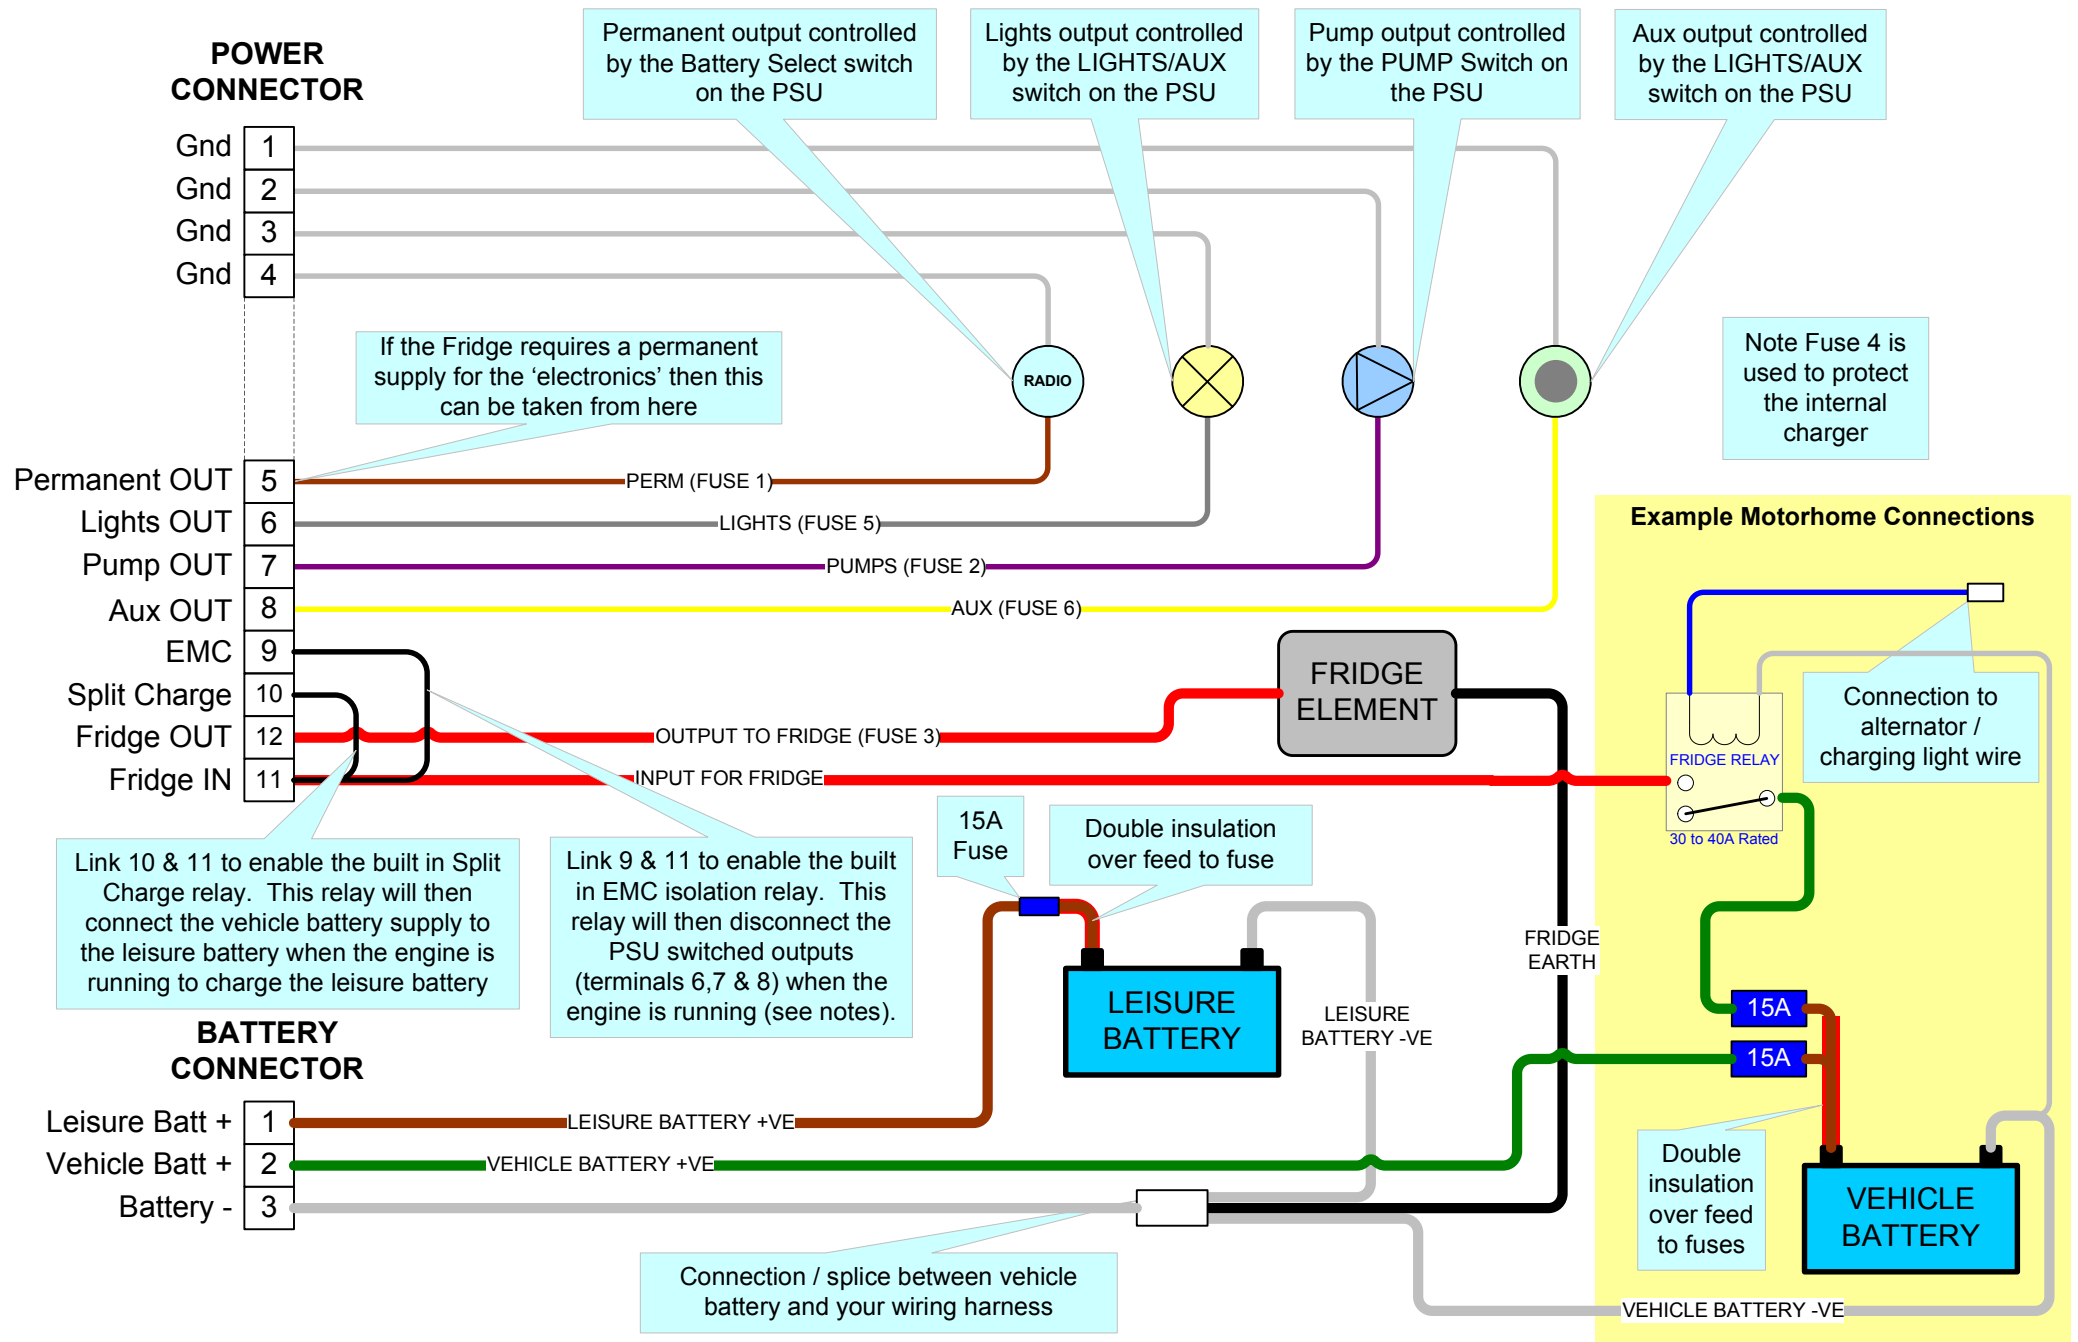


12v Installation – Motorhome Installation with Compressor Fridge & Voltage Sensing Relay

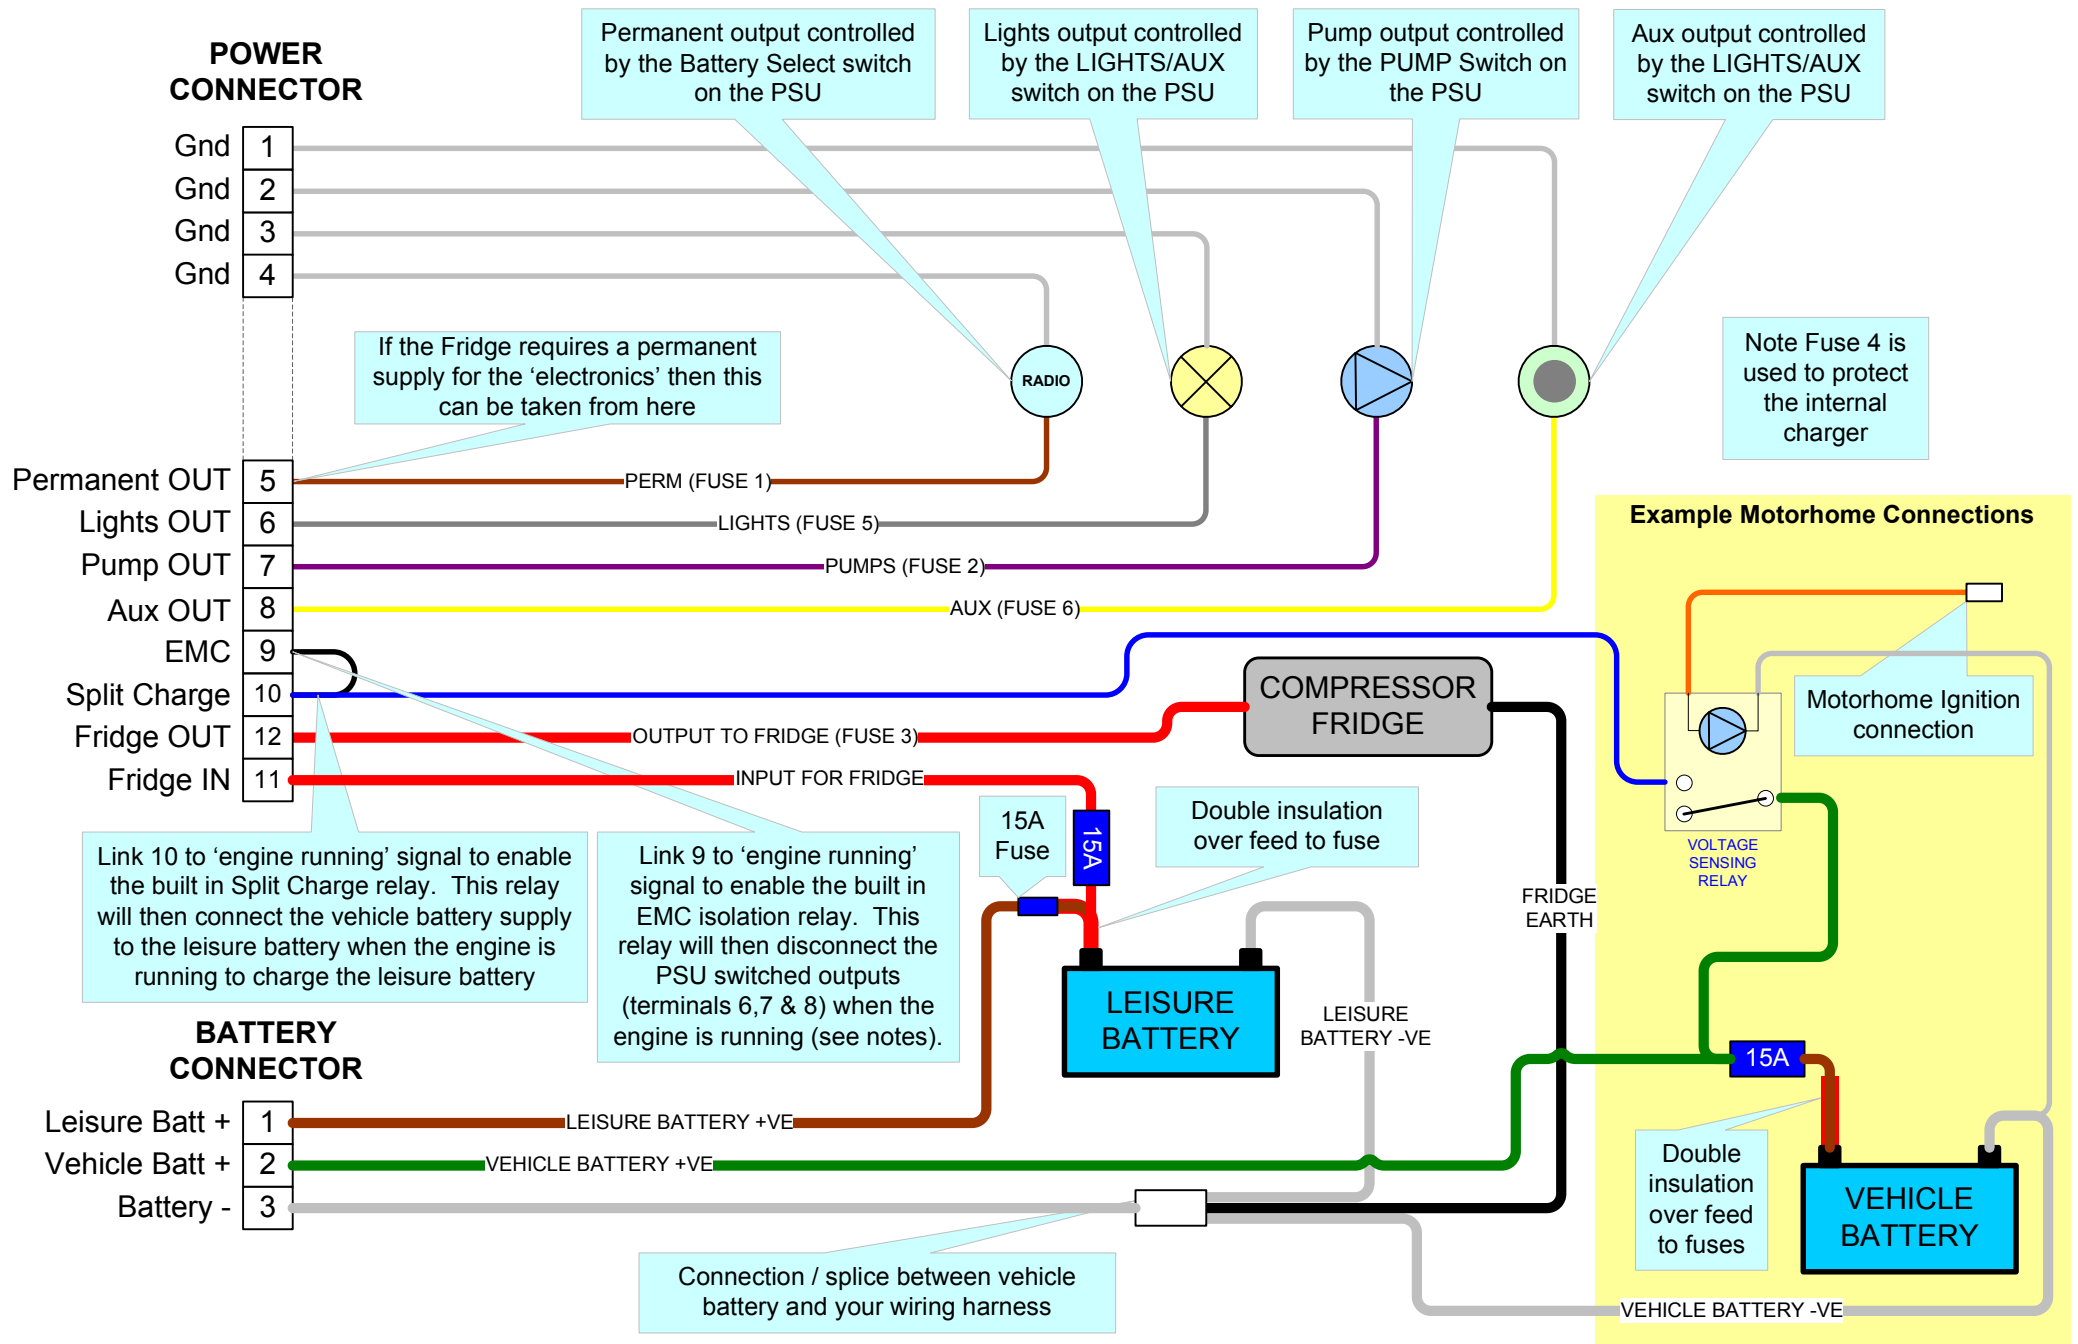

230V Installation

Earth Bond

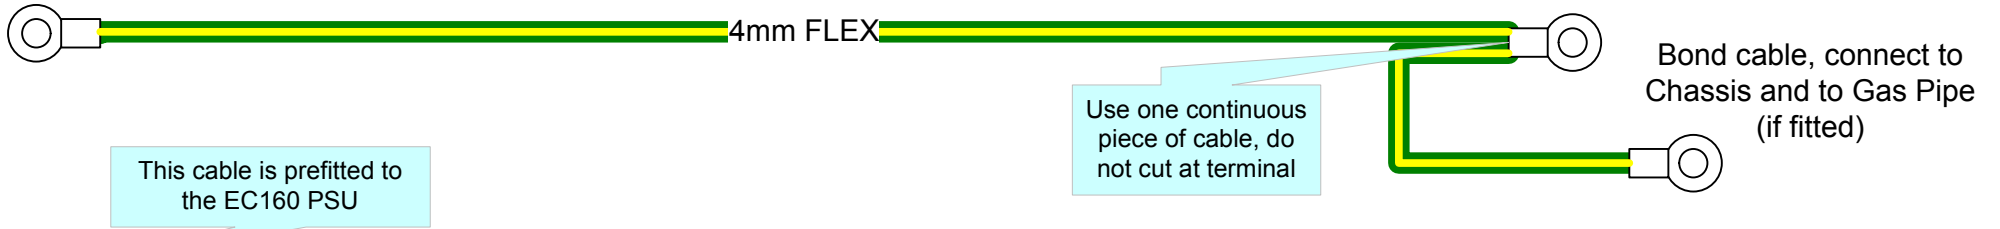


230V Input



MCB 3 Output



MCB 2 Output

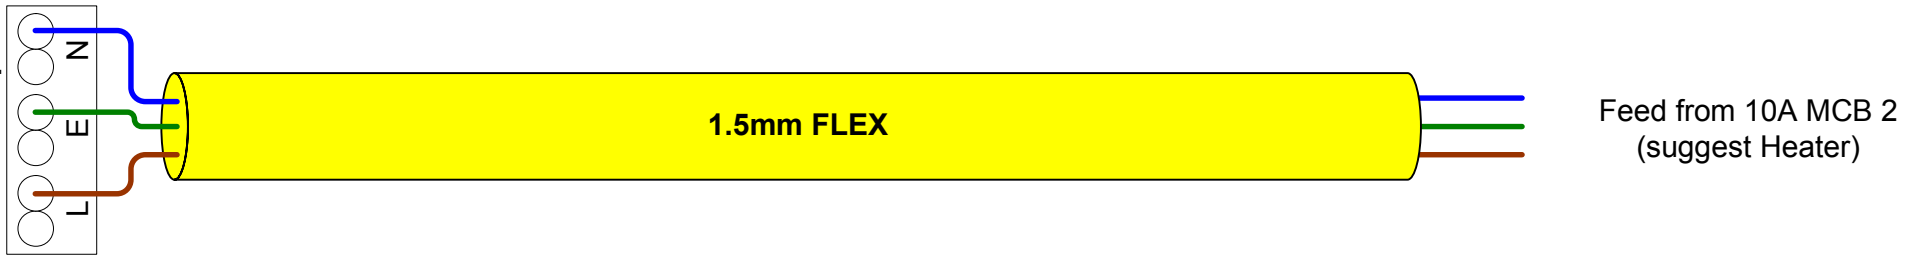

MCB 1 Output

